

EPSON PRINTER MAINTENANCE

Epson printers have a very high quality printing resolution; this means that the print head nozzles have to be manufactured much smaller than most other printer brands. The size of the actual nozzle hole is smaller than a human hair and it does not take very much for them to get blocked if regular maintenance is not performed.

The most common cause of clogged print heads is from infrequent printing! Use it regularly, at least once per week. If need be, put a sticky-note on your monitor to remind yourself! We recommend printing a Nozzle Check. This is a simple way to print from all the nozzle colours. Doing so helps keep the ink flowing through the print head nozzles.

» Note – General Maintenance

- DO NOT let your ink drop below the 'Caution Level' (3cm from the base of the bulk ink system).
- DO NOT do more than 2-3 heads cleans in a row. If the nozzle check is not correct after the third time allow the printer to sit for 2-3 hours and repeat the process again.
- Always keep in level with the print- do not raise it above the base of the printer.
- Use your printer at least once a week, even if it is just a nozzle check.

All products are supplied for professional use and to be used in conjunction with the Transfer Instructions provided. Power Digital is not liable for any pressing errors or undesired results. The Transfer Instructions are to be used as a guide only as different stock, hardware and environmental factors can affect the outcome. Contact our technician if you have any queries.

Contact our Tech Line for more information
Free Call 1300 554 742 or Email support@powerdigital.com.au

Brisbane - Sydney - Gold Coast - Canberra - Melbourne