


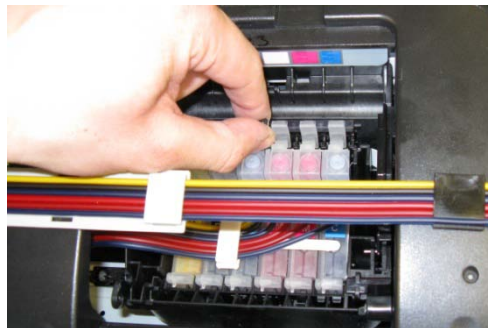
Resetting Chips on Epson 1400

If the red ink light is displayed and the 'Status Monitor' is stating that the ink cartridges are empty, you will need to reset the chips on the cartridge.

In order to do this you will need to press the ink button , this will move the carriage to cartridge removal position. It may move to the center of the housing first to indicate which cartridge needs replacing, if this is the case you will need to press the ink button 6 times before it will move to the cartridge removal position as shown below.



Once the carriage is in the cartridge removal position you need to press the chip reset button for 5 seconds as shown below.



This will make the cartridges read full again and the printer will think that you have replaced the cartridges.

Press the ink button again and the carriage will move to the capping station at the right hand side of the printer.

You can now carry on as normal.